



1. Disconnect +ve battery terminal, drain water system and remove the top and bottom hoses from the radiator. Remove the original electrical fan.
2. Remove the top two radiator mounting bolts, loosen the bottom two and slip the brackets between the radiator and the diaphragm making sure they are orientated correctly (see photo). Pinch up the radiator mounting bolts to hold the brackets into position, line up the studs with the holes in the fan and slide the fan onto the studs. Make sure everything is correctly aligned, tighten all of the radiator fixing bolts to clamp the brackets into the final position then fasten the fan with the nuts and washers.
3. Follow Electronic Fan Controller instructions for information on wiring and setup.

Revotec Ltd | Tel: 0044 (0)1491 824424 | Fax: 0044 (0)1491 833711 | www.revotec.com



1. Disconnect +ve battery terminal, drain water system and remove the top and bottom hoses from the radiator. Remove the original electrical fan.
2. Remove the top two radiator mounting bolts, loosen the bottom two and slip the brackets between the radiator and the diaphragm making sure they are orientated correctly (see photo). Pinch up the radiator mounting bolts to hold the brackets into position, line up the studs with the holes in the fan and slide the fan onto the studs. Make sure everything is correctly aligned, tighten all of the radiator fixing bolts to clamp the brackets into the final position then fasten the fan with the nuts and washers.
3. Follow Electronic Fan Controller instructions for information on wiring and setup.