

SEAT BASE DIAPHRAGM MG Midget & Austin Healey Sprite


Part Number: AHA9928

CONTENTS OF THE KIT


- 1 seat web assembly
- 12 hooks
- 2 rods

INSTALLATION

1. Orient hooks as shown (Figure 1).

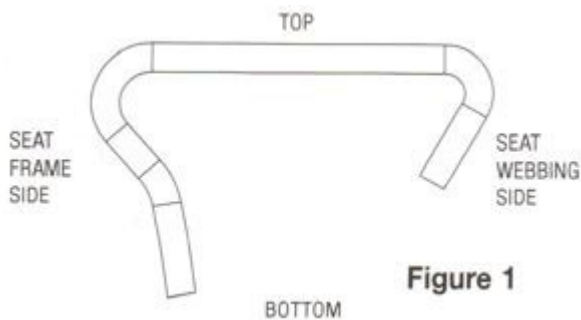

2. Start at the rear of the seat frame. Insert the two rods into the rear strap loops of the seat web assembly and attach the hook onto it as shown.

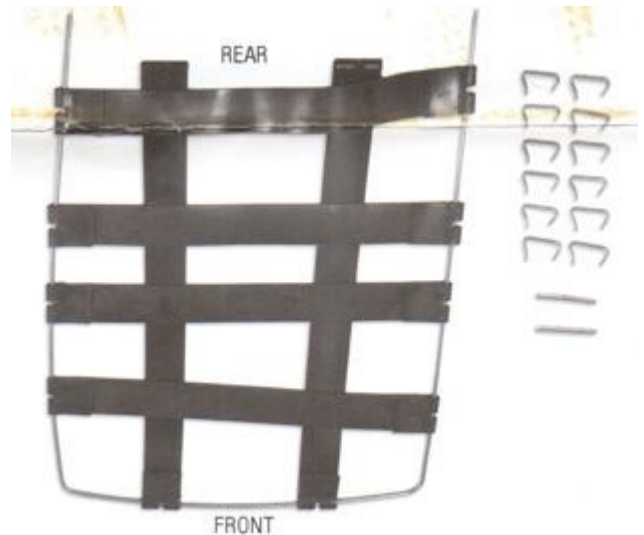





Quality Parts and Accessories for



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England
Telephone: 01522 568000 | E-mail: customer.services@rimmerbros.com

www.rimmerbros.com

3. Insert the rear hooks into the holes in the rear seat frame. Install hooks in the front two straps. Stretch the straps forward and insert the front hooks into the holes in the front of the seat frame.
4. Install a hook on each side of the straps. Attach each strap into the holes on the side of the seat frame, one strap at a time.

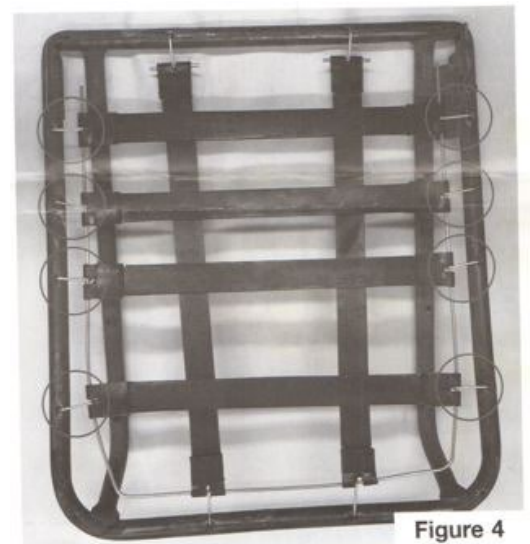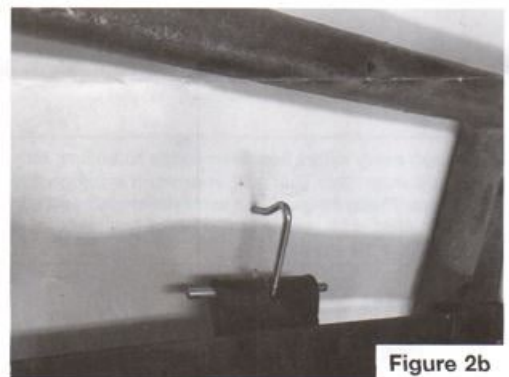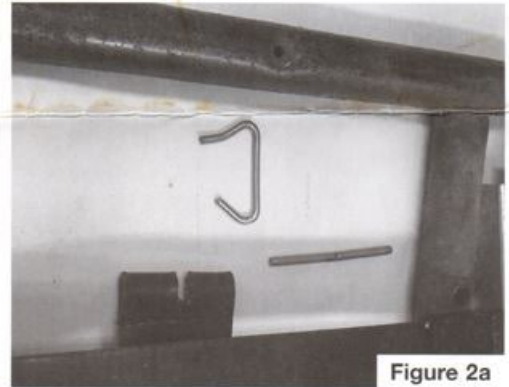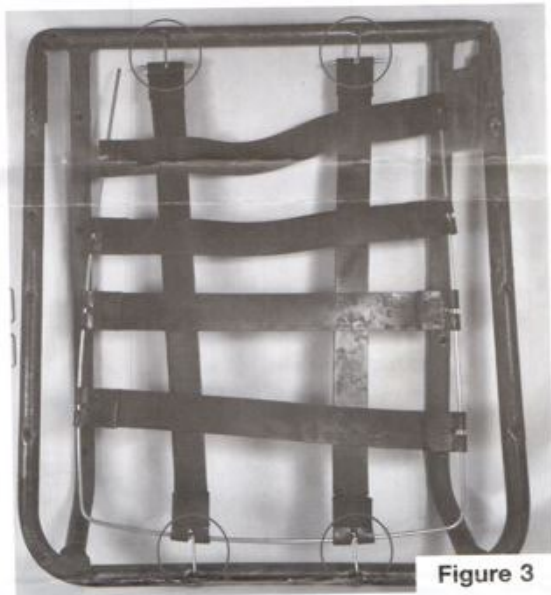

Quality Parts and Accessories for



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England
Telephone: 01522 568000 | E-mail: customer.services@rimmerbros.com

www.rimmerbros.com