


## **BA 2334 Silicon Hose Kit Fitting Instructions Disco 2.**

Tools Required:  
Screwdrivers (Flat and Phillips).  
Socket set (6mm, 7mm and numerous extensions).

The silicon hoses are a direct replacement for the intercooler pipes. However it can be a tricky job due to the fact that there is not much space. The picture below shows the hoses that are replaced.

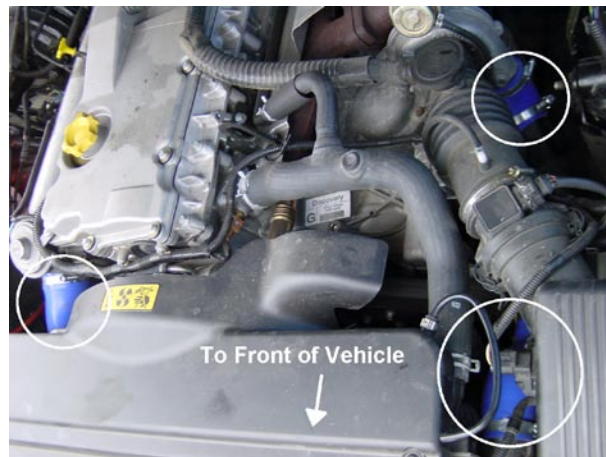

1. Un screw the Jubilee clips holding the existing hoses using a screwdriver or socket.
2. Remove the hose. (They may be on quite tight but will come off).
3. Fit the silicon hose (not forgetting the Jubilee clips) and tighten again.