


BFA 5001 Freelander Dog Guard Fitting Instructions

- 1 Tilt forward the rear seats and remove the two eyelets in the boot (These are held in place with 'Torx' Bolts). See photograph 1. Fit the Dog Guard brackets using the Torx bolts.

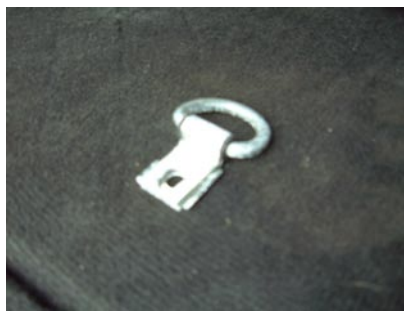

- 2 Get the Dog guard into the vehicle and position over the brackets you have just fitted. Use the 3 spoked wing nuts to hold in place but do not tighten.(Photograph 2)



- 3 Now position the Dog Guard so that the slotted bracket fits around the rear seat catch. See photograph 3. When the seats are up right they hold the guard in position.

