



FRONT ELECTRIC WINDOW CONVERSION KIT (PAIR) Land Rover Defender



Part Number: CUH000101CONVK

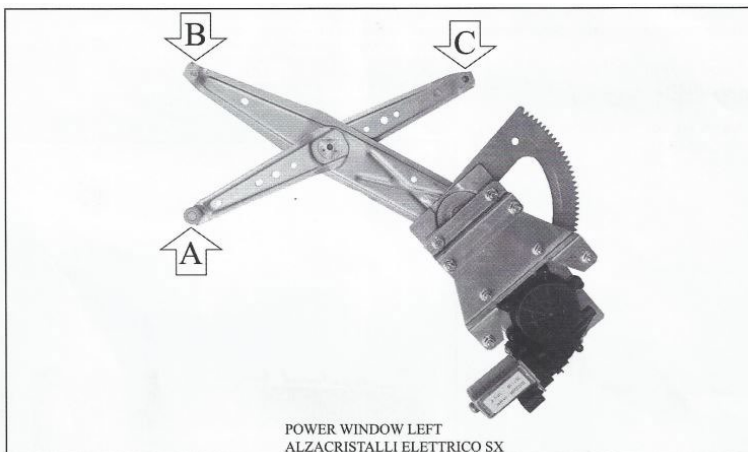

This installation instruction is for both left and right side.

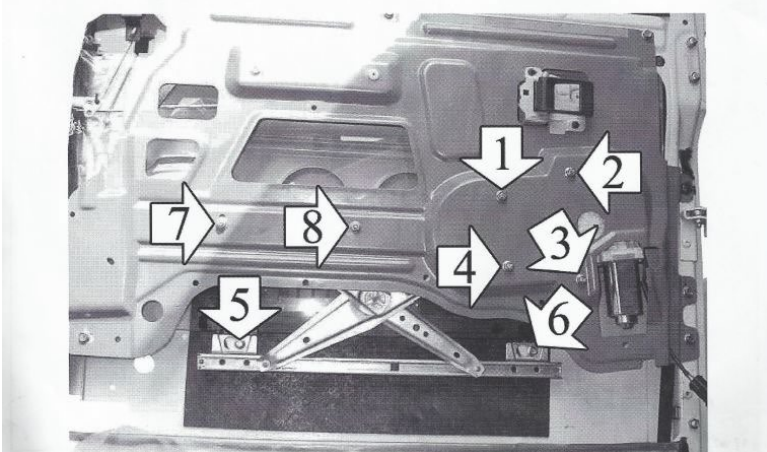


Quality Parts and Accessories for



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England
Telephone: 01522 568000 | E-mail: customer.services@rimmerbros.com

www.rimmerbros.com

CONNECT FEED TO + 15 OF IGNITION SWITCH.
 CONNECTER L'ALIMENTATION AU + 15 APRES CONTACT.
 PLUS-LEITUNG + 15 ANSCHLIESSEN.
 CONECTAR LA CORRIENTE AL + 15 BAJO CONTACTO.
 COLLEGARE L'ALIMENTAZIONE AL + 15 SOTTO CHIAVE.

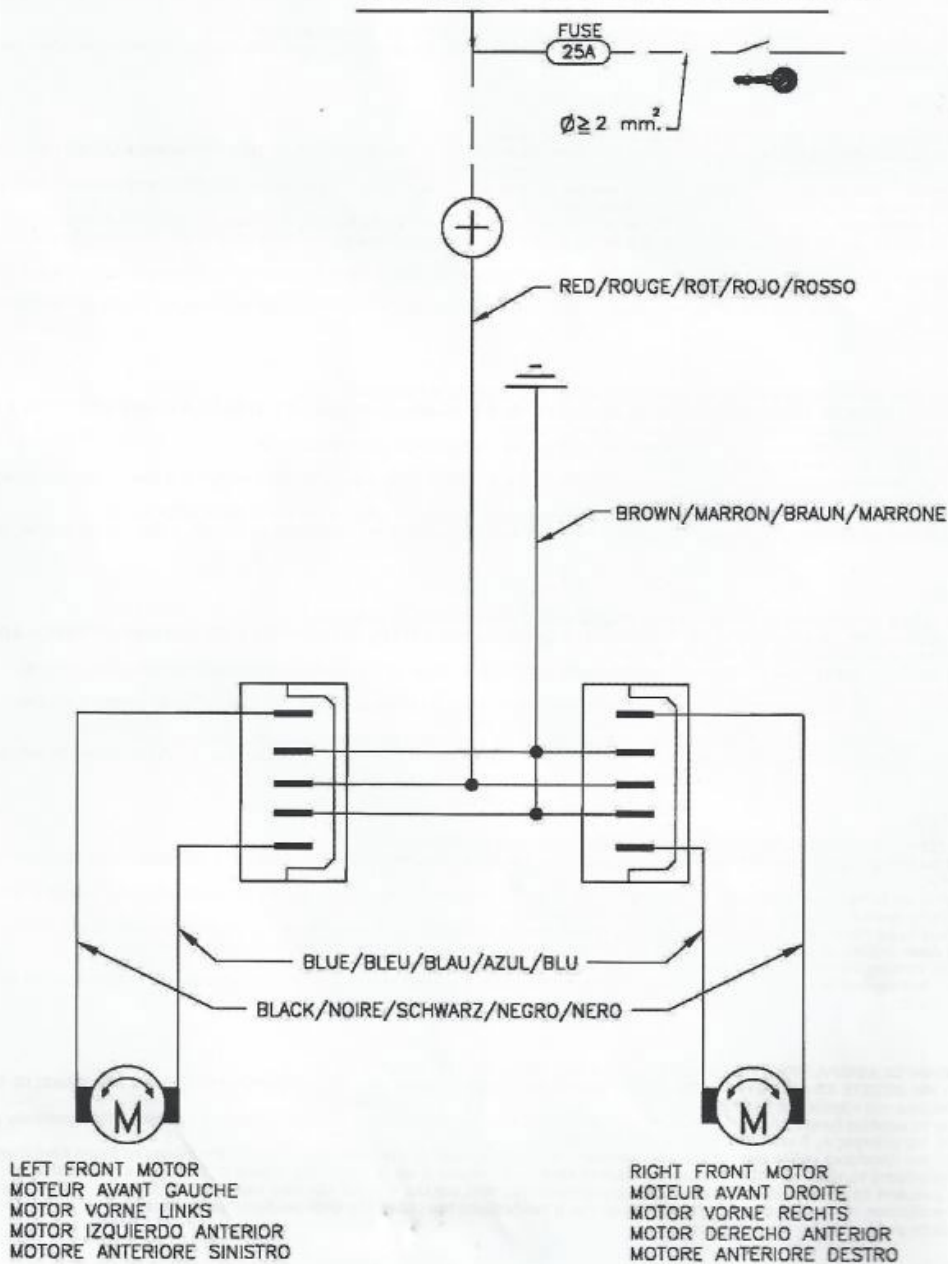

Quality Parts and Accessories for



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England
 Telephone: 01522 568000 | E-mail: customer.services@rimmerbros.com

www.rimmerbros.com



A BRITISH COMPANY SUPPORTING BRITISH CARS

WARNING: DO NOT OPERATE THE WINDOW REGULATOR BEFORE IT IS COMPLETELY ASSEMBLED ON THE VEHICLE.

- a) Remove door trim and window regulator.
- b) Remove the short and long channels from the window regulator (NOTE: save channel to be used later).
- c) Insert the slides A,B and C into the glass-channels.
- d) Insert the electric window regulator into the door and secure it into the hole at positions 1,2,3 and 4. Secure short slide into positions 7 and 8 (see photo). Lower the glass and secure it into positions 5 and 6. Wire as per wiring diagram.
- e) Check correct window operation, adjust with the screws 7 and 8. If required, before re-fitting door trim.
- f) For the replacement of the spare-part, in case the motor connector is not compatible with the original one, make the wiring connection with the cable supplied.

Quality Parts and Accessories for



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England
Telephone: 01522 568000 | E-mail: customer.services@rimmerbros.com

www.rimmerbros.com