


FRONT AND REAR MUDFLAPS

Triumph 2000 & 2500

Part Number: **RM8154**

Assemble mudflaps as per diagram below.

You will need to drill the wheel arch lip to bolt through the small nut and bolt. Once in position, use this to align the mudflap on the car, then drill through into the inner arch and bolt up the car. Paint or protect all drilled holes as necessary.

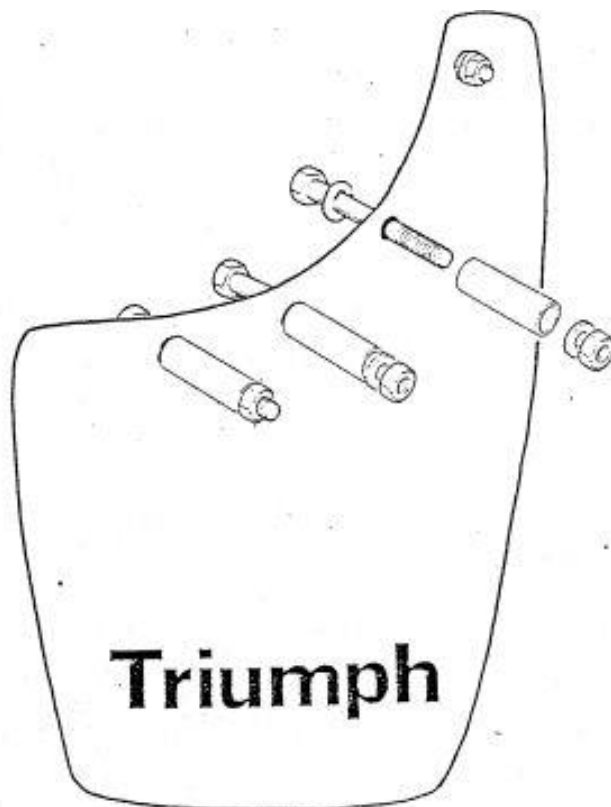

QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

www.rimmerbros.com