

## MUDFLAPS

### Triumph Stag

Part Number: **RS1418**


#### Kit includes:

- (10) Nut - Part No. NH105041
- Stag Mudflap Fit.Ins. - Part No. FI25
- Rear Bracket LH. - Part No. RB7277REARBKTLH
- Rear Bracket RH. - Part No. RB7277REARBKTRH
- (10) M5 X 20 Pozi Screw - Part No. RIM205
- (10) M5 Form 'C' Plain Washer - Part No. RIM207
- Stag Mudflaps (PR) Printed - Part No. RS1418MUDFLAP
- (10) Washer-Spring - Part No. WL105001

#### Tools required:

- 5mm High-Speed Drill Bit
- Electric Drill
- Phillips Screwdriver
- 8mm Spanner

The Mud Flaps have multiple screw hole positions to allow for different shape arches and to allow adjustment/alignment. The arch lip and boot floor will require drilling to suit, we recommend the holes are treated to prevent rusting after drilling.

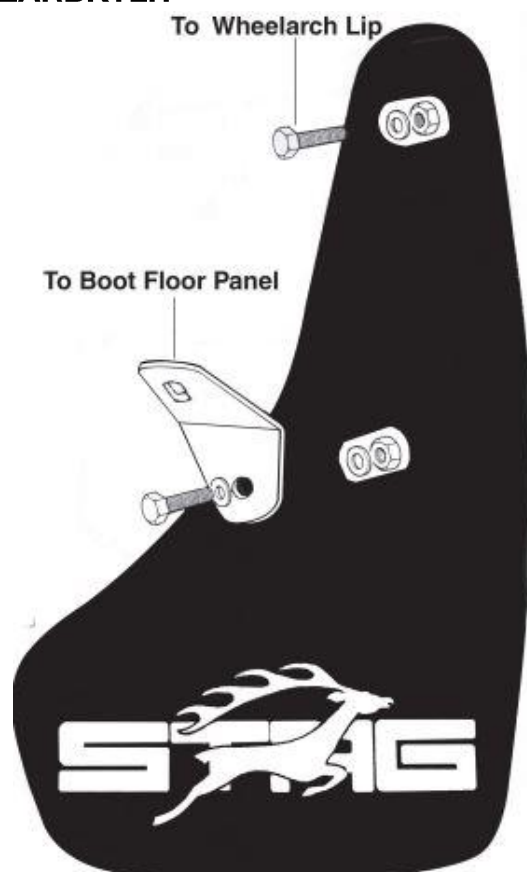

#### QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

[www.rimmerbros.com](http://www.rimmerbros.com)