


MUDFLAP KIT REAR

Land Rover

Part Number: RA1434

ASSEMBLE KIT

1	LEFT HAND BRACKET
1	RIGHT HAND BRACKET
1	SHORT STAY
1	LONG STAY
2	NO RETAINING ANGLES
8	NO M6 x 20 SET BOLTS
8	NO M6 x 25 SET BOLTS
16	NO M6 FULL NUTS
16	NO M6 SPRING WASHERS
32	NO M6 FLAT WASHERS
1	PAIR BR 3092 MUD FLAPS

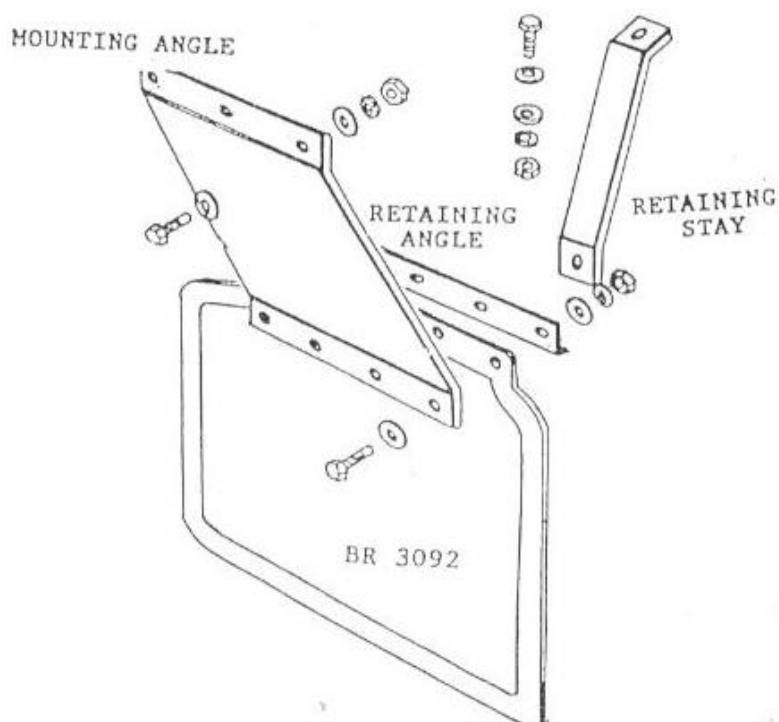

QUALITY PARTS AND ACCESSORIES



Triumph House, Sleaford Road, Bracebridge Heath, Lincoln LN4 2NA, England

UK Tel: +44 (0)1522 568000 | USA Tel: 1 855 746 2767 | Fax: +44 (0)1522 567600 | E-mail: sales@rimmerbros.com

www.rimmerbros.com