


Fitting instructions for RH5193REAR

Please note – Drilling to the inner wheel arch and quarter valance is required to fit this kit

Kit contents:

Part number	quantity	description
RX1333	1	*Pair* triumph mudflaps
BRACKET4	4	Bracket for RH5193rear
RIM205	4	M5 x 20 pozi screw
RIM207	20	M5 form "C" plain washer
WL105001	10	Spring washer M5
NH105041	10	Nut M5 c/f steel
257020A	6	Setscrew 3/16 unf x 3/4"

To begin, assemble the mudflaps and bracket assemblies as shown on the below diagram:

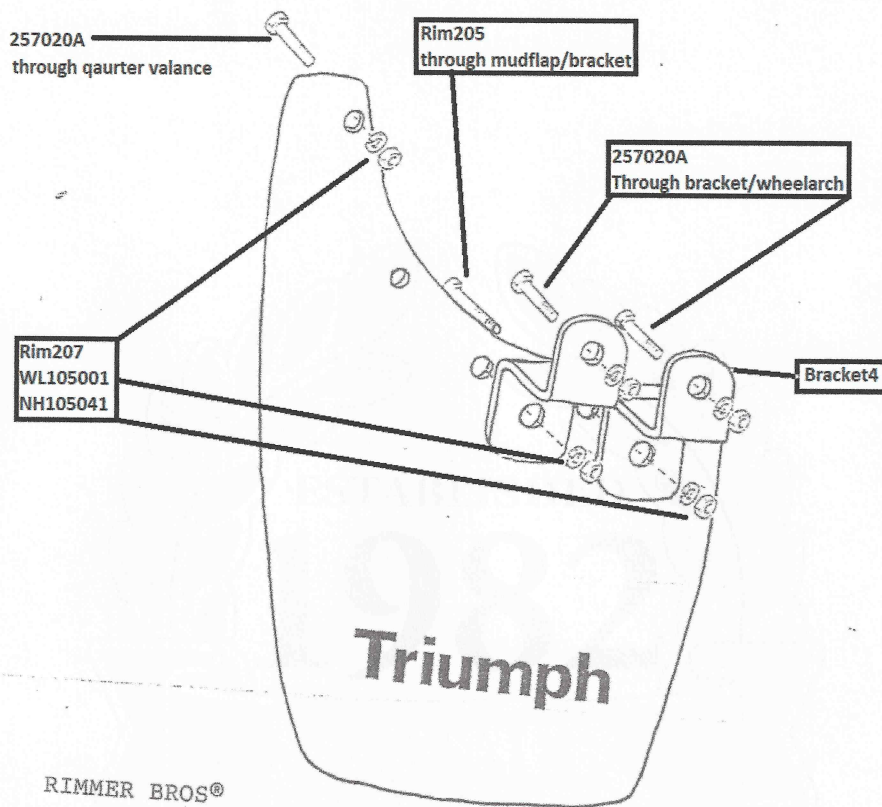

Quality Parts and Accessories



Rimmer Bros Limited, Triumph House
Sleaford Road, Bracebridge Heath
Lincoln LN4 2NA, England
Tel: 01522 568000 Fax: 01522 567600

E-mail: sales@rimmerbros.co.uk
www.rimmerbros.co.uk

Offer the built assembly to the wheel arch, the upper / outermost screw is to be attached by drilling a hole in the forward facing flange of the valance roughly in line with hole used to retain the alloy rubber bumper capping's.

With the upper fitting now fixed, the inner wheel arch brackets (bracket 4) will make contact with the wheel arch. Ensuring the mud flap is level, proceed to drill the two holes in the inner wheel arch.

With all of the holes now drilled remove the mud flap assembly from the vehicle and treat the newly drilled holes in the vehicle to protect against rust.

Refit the assembly and repeat this process on the other side of the vehicle taking note that the mud flaps are handed.



Quality Parts and Accessories



Rimmer Bros Limited. Triumph House
Sleaford Road, Bracebridge Heath
Lincoln LN4 2NA, England
Tel: 01522 568000 Fax: 01522 567600

E-mail: sales@rimmerbros.co.uk
www.rimmerbros.co.uk