

COOLING FAN KIT – REVOTEC

22" Radiator


Triumph Spitfire

Part Number: RL167522



1. Disconnect +ve battery terminal, drain the water system and remove the top and bottom hoses from the radiator, remove the four radiator mounting bolts and lift the radiator out of the car.
2. Push the 2 flush mounts (4) (FM225) through the left and right mounting lugs on the cooling fan (3) and lay it down on the bench, next slide the 4 plastic spacers (5) onto the flush mounts followed by the fan brackets (2) (orientated so the bracket with the sloped ends is at the bottom), washers (6) and nuts (7) (Fig.2)
3. Lay the assembly over the radiator and slide in position lining up the bolt holes. Holding both the radiator and brackets together (an extra pair of hand may be required) gently lower the assembly into position in the car and fasten using your original radiator mounting bolts.
4. Position the fan controller in a suitable place in the bottom hose, refill the water system and follow Electronic Fan Controller instructions for information on wiring and setup.



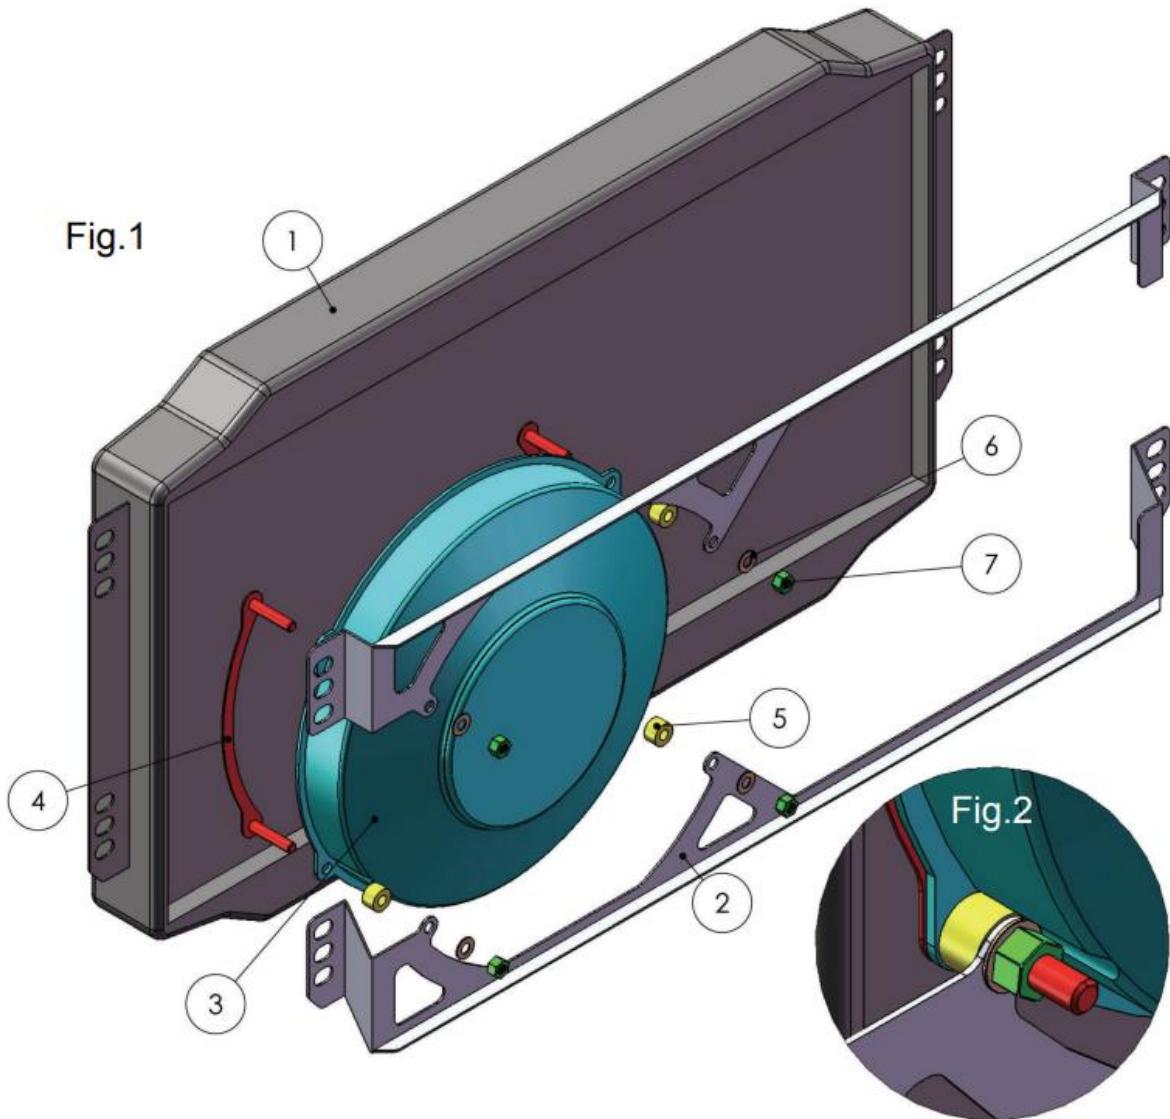

Triumph House, Sleaford Road, Bracebridge Heath, Lincoln, LN4 2NA, England
Telephone: 01522 568000 | E-mail: sales@rimmerbros.com

www.rimmerbros.com