

RUBBER DIAPHRAGM FRONT SEAT KIT


Triumph Dolomite 1972-1980

Part Number: **RT1309**



Insert the hooks into the rubber diaphragm as shown in the diagram below.

Long hooks to be inserted down the sides and on the diagonal corners, smaller hooks on the front and back. The 4 hooks at the back to face upwards.

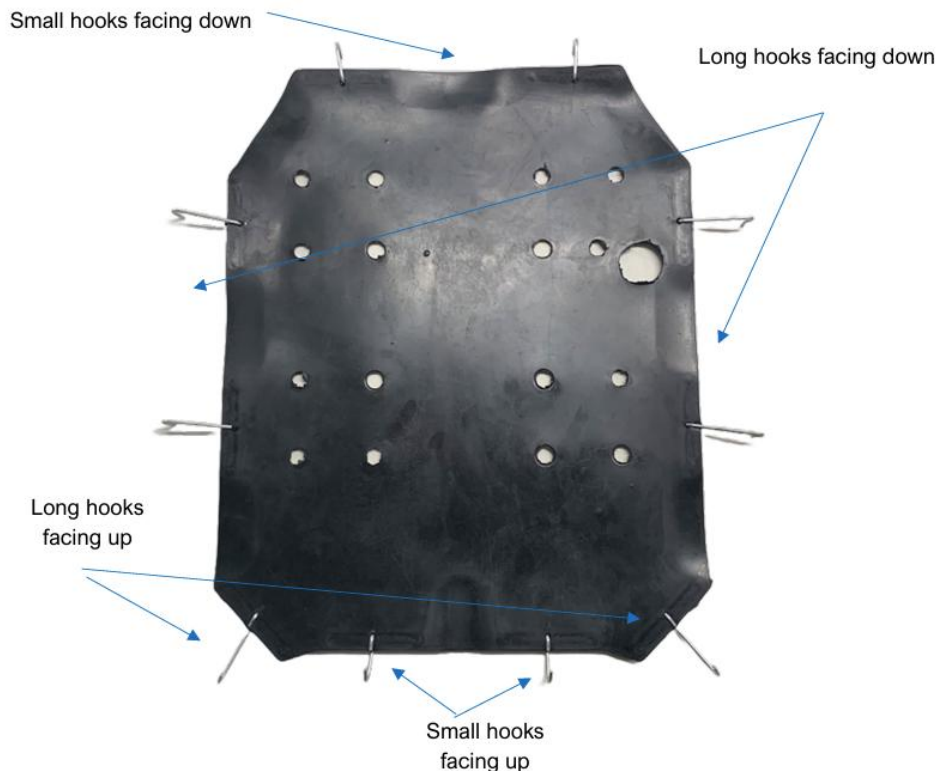

Offer the diaphragm up to the frame and drill new holes for the hooks. Insert the hooks to the drilled holes starting at the rear of the frame.

